

COVERLITE™

Coverlite™ Tone of the best definition of a Creative eyewear... overspecs for prescription wearers or spectacle for visitors whatever the way you wear it you will love it! With an unrestricted peripheral vision, high side arms graduate to soft, flexible material for additional comfort. pantoscopic side arms adapt to any facial shape for customised fit and optimal protection with soft grip for a pressure free fit

And a version available in Orange 550 lens for specific applications such as surface inspection, mechanical work, ultra-violet light, vulcanization, work with curing light lamp, dentist and medical application.

WEIGHT

35g

LENS

- Unrestricted peripheral vision
- Lateral protection



FRAME

- Soft temple tips
- Ventilated browguard
- Pressure free fit



- + ULTRA LIGHTWEIGHT
- + TEMPLES PRESSURE FREE
- + ORANGE LENS VERSION



1COV23C
Clear



1COV23S
Smoke



1COV23SKN
Smoke ex



1COV23CKN
Clear ex



1COV23OR550
Orange 550
ORANGE



1COV23W5
Welding 5

Reference	Lens Markings	Frame Markings	Lens Treatment	Conformity
1COV23C	2C-1.2 1FT CE	EN 166 FT CE	Anti-scratch/Anti-fog	EN 166 EN 170
1COV23S	5-2.5 1FT CE	EN 166 FT CE	Anti-scratch/Anti-fog	EN 166 EN 172
1COV23SKN	5-2.5 1FTKN CE	EN 166 FT CE	Anti-scratch/Anti-fog (KN)	EN 166 EN 172
1COV23CKN	2C-1.2 1FT KN CE	EN 166 FT CE	Anti-scratch/Anti-fog (KN)	EN 166 EN 170
1COV23OR550	2-2 1FT CE	EN 166 FT CE	Anti-scratch/Anti-fog	EN 166 EN 170
1COV23W5	5 1FT CE	EN 166 FT CE	Anti-scratch/Anti-fog	EN 166 EN 169

For Lens & frames markings details, please refer to pages 7 to 9 in Swiss one catalogue.
For Lens technologies and colors details please refer to pages 10 to 12 in Swiss one catalogue.

COVERLITE™



DIMENSIONS OF SPECTACLE

Lens Thickness:	1.6mm
Lens Base:	2.5
Lens Size (Diagonal):	148.5mm
Bridge:	-
Temple Length (Lens to tip):	165.0mm
Overall Width:	137.0mm
Closest point between temple tips:	27 +/- 3mm



- 1 Polycarbonate
- 2 Polycarbonate
- 3 TPR
- 4 Polycarbonate

INSTRUCTIONS FOR USE

- In use ensure that the safety spectacles fit comfortably and securely on the head
- Ensure that the safety spectacles are in place, before entering the hazard area

CLEANING & MAINTENANCE

- The safety spectacles may be cleaned with soap and warm water and dried with a soft cloth
- Do not clean with chemical or abrasive cleaners
- The eye shield should be stored out of direct sunlight, away from chemicals and not exposed to extremes of temperature

LIMITATIONS OF USE

- Protection will only be offered if the safety spectacles are fitted correctly
- If the safety spectacles become scratched or damaged they should be replaced, likewise if the safety spectacles are subjected to severe impact they should be replaced immediately
- Do not apply paint, solvents, adhesives or self-adhesive labels, except in accordance with instructions from the manufacturer
- The safety spectacles, when in contact with the skin may cause allergic reactions to susceptible individuals. If this occurs leave the hazard area, remove the eye shield and seek medical advice
- The attention of users is also drawn to the dangers of modifying or removing any of the original component parts, other than as recommended by the manufacturer
- Coverlite™ is not suitable for protection against dusts, liquids or molten metals

DIMENSIONS OF INNER PACKAGING


Quantity:	8
Weight:	0.54kg



- H Height: 96mm
- L Length: 191mm
- W Width: 284mm

DIMENSIONS OF OUTER PACKAGING

Quantity:	240
(30 display boxes of 8 p)	
Weight: (Approx.)	18.1kg

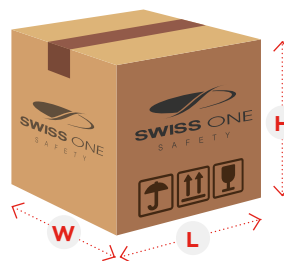

- H Height: 63cm
- L Length: 98.5cm
- W Width: 30cm

Reference	EAN barcode Unit	EAN barcode inner packaging	EAN barcode outer packaging	Country of origin
1COV23C	5038428303248	5038428303255	5038428303262	Taiwan
1COV23S	5038428303279	5038428303286	5038428303293	Taiwan
1COV23SKN	5038428303392	5038428303408	5038428303415	Taiwan
1COV23CKN	5038428303361	5038428303378	5038428303385	Taiwan
1COV23OR550	5038428303330	5038428303347	5038428303354	Taiwan
1COV23W5	5038428303309	5038428303316	5038428303323	Taiwan