




TECHNICAL SHEET FA 10 114 00

Harness for work in confined spaces (S - L)

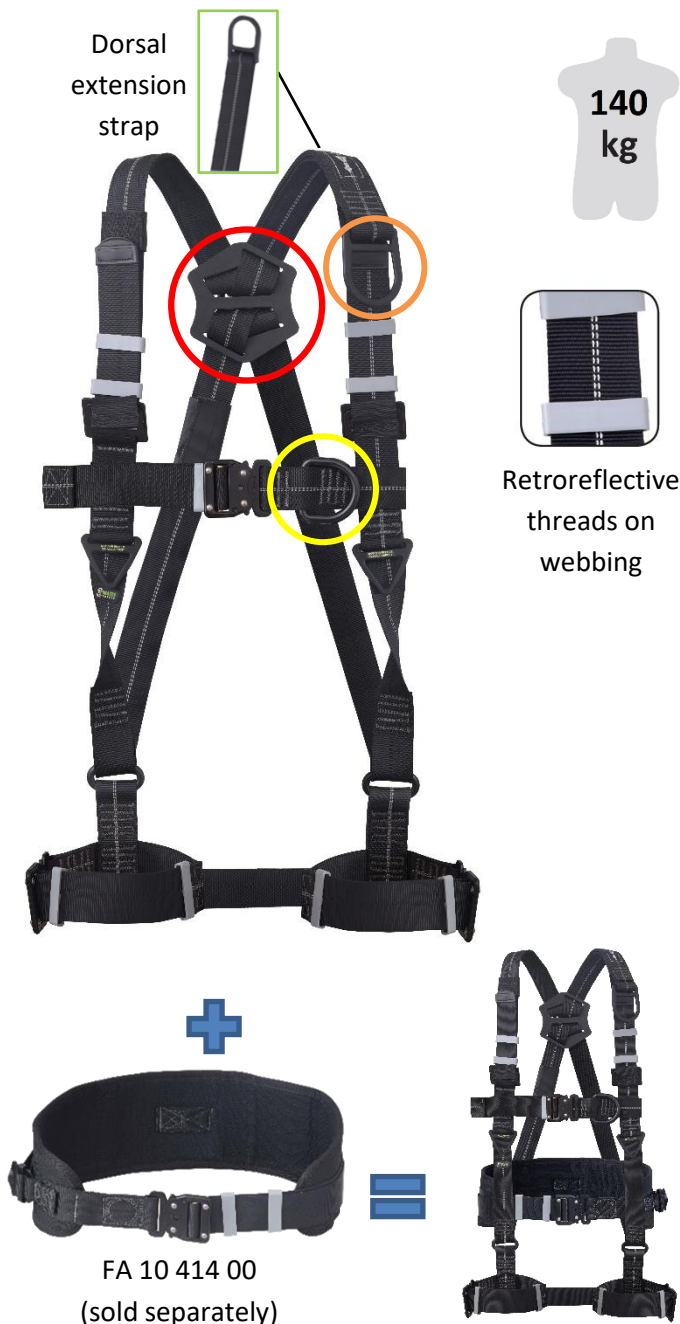


Designed for a use in confined spaces, especially in the sanitation and drinking water distribution industries.

Attachment points: 1 dorsal D-Ring ● (A), 1 D-ring on dorsal extension strap ● (A) and 1 sternal D-Ring ● (A) for fall arrest system.

Adaptability: Shoulder straps, chest strap and thigh straps are adjustable. Shoulder straps have combination buckles.

Convenience: Oil, water and dirt-repellent REVOLTA webbing, which makes it tear and cut-resistant for increased durability and longevity. Highly UV-resistant.



Webbing with 2 retroreflective threads for increased visibility in dark risk areas.

Shoulder straps have Velcro loops for hanging the gas detector / communication box, 2 tool-holding triangles for keeping extra karabiners and accessories.

Ergonomics: Sternal and thigh straps have automatic buckles.

Compliance: EN361:2002.

OPTION:

Comfortable belt for installing and using the self-rescuer respirator if need be (ref. FA 10 414 00)

Material of components:

Webbing: Polyester with water, oil & dirt-repellent coating

Attachment D-rings (dorsal and sternal): Aluminium

Other buckles, D-ring on extension strap: Steel

Size: S - L (available in L-XXL : FA 10 114 01)	CE	Weight: 1.66 kg
---	-----------	-------------------------------

KRATOS SAFETY
689 Chemin du Buclay
38540 Heyrieux – France

Tel. : +33 (0)4 72 48 78 27
Fax : +33 (0)4 72 48 58 32
www.kratossafety.com / info@kratossafety.com

HS CODE 6307 20 90
CARTON SIZE / PCS. 60 x 40 x 48 cm / 12
AET N° 9227 I1
Satra Technology Centre, N°0321 Wyndham Way, Telford Way, Kettering Northamptonshire, NN16 8SD, United Kingdom
ARTICLE 11 GB07/73551
SGS United Kingdom Ltd., N°0120 Unit 202B, Worle Parkway, Weston-super-Mare, BS22 6WA, United Kingdom