


Helixon-S webbing, retractable fall arrester 3.50 m



Helixon-S

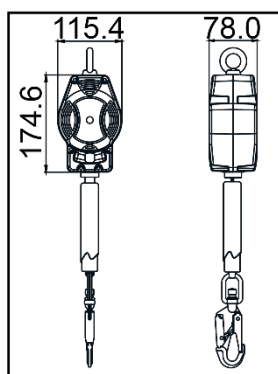

Length:		Weight:
3.50 m		1.86 kg

KRATOS SAFETY

689 Chemin du Buclay
38540 Heyrieux – FRANCE

Tel : +33 (0)4 72 48 78 27

Fax : +33 (0)4 72 48 58 32

www.kratossafety.com / info@kratossafety.com

- Robust & durable polymer casing, equipped with:
 - ✓ a carrying handle,
 - ✓ a window, that can be easily removed for reaching the internal mechanism, in order to inspect it without totally opening the casing.
- Polyester webbing 25 mm wide having:
 - ✓ a connector ref. FA 50 203 20 with load indicator,
 - ✓ an external energy absorber.
- Internal braking mechanism to reduce the fall arrest force to less than 6 kN.
- Swivel and FA 50 101 17 connector at anchorage end.
- Resistance > 15 kN.

Compliance: EN 360:2002.

Material of components:

Protective casing: PA 6 30% fiberglass

Webbing: Polyester

Connectors: Steel

HS CODE
8428 90 90
DIMENSIONS CARTON / UC
60 x 40 x 24 cm / 4
AET N° I E
Satra Technology Centre, N°0321 Wyndham Way, Telford Way, Kettering Northamptonshire, NN16 8SD, United Kingdom
ARTICLE 11 GB07/73551
SGS United Kingdom Ltd., N°0120 Unit 202B, Worle Parkway, Weston-super-Mare, BS22 6WA, United Kingdom