




TECHNICAL SHEET FA 20 102 30

Guided Type Fall Arrester on Kernmantle Rope, 30 m

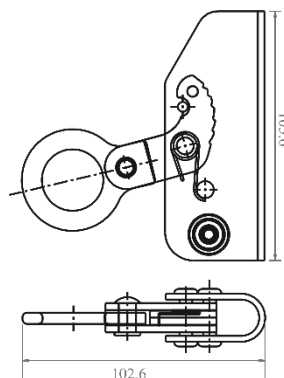

Length:	CE	Weight:
30 m		3.80 kg

KRATOS SAFETY

689 Chemin du Buclay
38540 Heyrieux – FRANCE

Tel : +33 (0)4 72 48 78 27
Fax : +33 (0)4 72 48 58 32

www.kratossafety.com / info@kratossafety.com

- Works on 12 mm diam. Polyester Kernmantle rope.
- The rope grab is incorporated permanently on its anchorage line and comes with an energy absorber.
- The sewing is protected with a strong transparent covering sleeve, which protects the end and also makes the stitches visible for easy inspection before the use.
- Minimum breaking strength > 15 kN.

Connectors: 1 steel screw-locking karabiner opening 18 mm for connection on a harness.

Compliance: EN353-2:2002.

Material of components:

Rope Grab: Stainless steel

Rope: Polyester

Shock Absorber: Polyester and Polyamide

HS CODE
83081010
CARTON SIZE / PCS.
80 x 40 x 24 cm / 05
AET N°5598 Issue 1 Extension 1
Satra Technology Centre, N°0321 Wyndham Way, Telford Way, Kettering Northamptonshire, NN16 8SD, United Kingdom
ARTICLE 11 GB07/73551
SGS United Kingdom Ltd., N°0120 Unit 202B, Worle Parkway, Weston-super-Mare, BS22 6WA, United Kingdom