

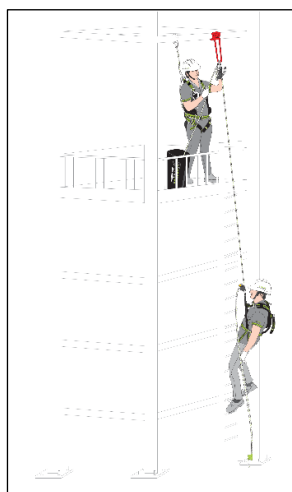


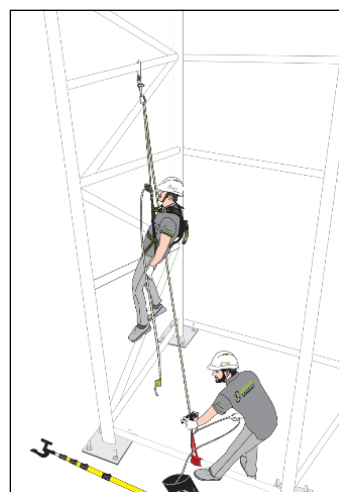

TECHNICAL SHEET FA 20 113 50

FALL ARREST SYSTEM WITH PRE-INCORPORATED EVACUATION FEATURE – 50 M

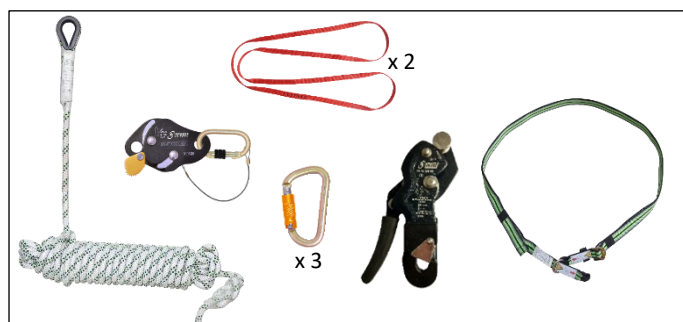

- Fall arrest system sliding on Kernmantle rope with integrated grip descender on anchorage point, allowing to release the anchorage point and to descend the victim.
- This assembly allows anticipating the rescue system even before installing the fall arrester.
- Having several different anchorage straps, this kit can be installed on a multitude of supports (ladder, pylon, large-sized structures,...).
- This kit contains:
 - 1 grip descender, ref. *FA 70 021 00*,
 - 1 fall arrester sliding on a rope - ref. *FA 20 103 00A*, and its anchorage line - ref. *FA 20 103 50* (50 m),
 - 1 adjustable anchorage strap, max. length 5 m, ref. *FA 60 029 05*,
 - 2 anchorage webbing slings, length 1.50 m, ref. *FA 60 005 15*,
 - 3 steel triple action karabiners, ref. *FA 50 301 23*,
 - 1 storage and transport bag, ref. *FA 90 105 00*.
- This kit was designed in order to allow perform an evacuation operation in less than 10 minutes, including by a person who does not have deep knowledge concerning rescue/evacuation.

Material of components:

Length:	CE
50 m	

KRATOS SAFETY

689 Chemin du Buclay
38540 Heyrieux – FRANCE

Tel : +33 (0)4 72 48 78 27

Fax : +33 (0)4 72 48 58 32

www.kratossafety.com / info@kratossafety.com

CARTON SIZE / PCS.

1

AET N° I E

Satra Technology Centre, N°0321

Wyndham Way, Telford Way, Kettering
Northamptonshire, NN16 8SD, United Kingdom

ARTICLE 11 GB07/73551

SGS United Kingdom Ltd., N°0120

Unit 202B, Worle Parkway,
Weston-super-Mare, BS22 6WA, United Kingdom