


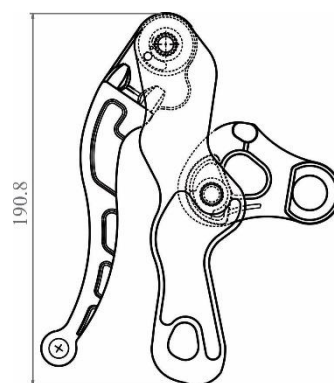

Grip Descender

- Made up of aluminium alloy.
- Black anodized finish.
- Ideal for descend on a single rope. It is equipped with a unique self-braking system which initiates the brake as soon as the handle is released or clasped too tightly.
- Works on 10-11 mm diameter Kernmantle rope
- Max speed : 2m/s
- Conforms to EN341 Class A.

**Material of components:**

Aluminium alloy

	Weight: 0.345 kg
---	----------------------------

KRATOS SAFETY
 689 Chemin du Buclay
 38540 Heyrieux – FRANCE

Tel : +33 (0)4 72 48 78 27
 Fax : +33 (0)4 72 48 58 32

www.kratossafety.com / info@kratossafety.com

HS CODE

84289090

CARTON SIZE / PCS.

40 x 30 x 15 / 40

Satra Technology Centre, N°0321
 Wyndham Way, Telford Way, Kettering
 Northamptonshire, NN16 8SD, United Kingdom

ARTICLE 11 GB07/73551

SGS United Kingdom Ltd., N°0120
 Unit 202B, Worle Parkway,
 Weston-super-Mare, BS22 6WA, United Kingdom