




TECHNICAL SHEET FA 60 007 00

HORIZONTAL TEMPORARY LIFELINE

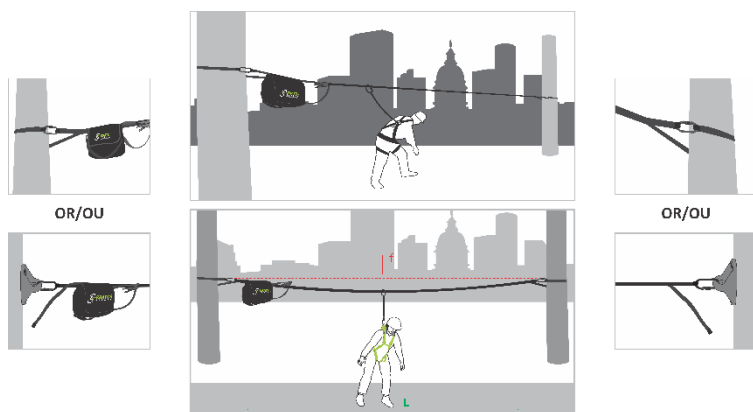

Length:	CE	Weight:
2 to 20 m		3.4 kg

KRATOS SAFETY

ZI les Portes du Dauphiné
4, rue de l'Aigue
69780 Saint Pierre de Chandieu – FRANCE

Tel : +33 (0)4 72 48 78 27

Fax : +33 (0)4 72 48 58 32

www.kratossafety.com / info@kratossafety.com

Recommendation: Secures an operator throughout his travels.

Forked ends allow:

- either to anchor to a structure without the need to add anchorage sling;
- or hang directly onto adapted anchorage point, such as FA 60 011 00.

Steel ratchet to put the system into tension after adjusting the required length.


Supplied with 2 steel screw-locking karabiners FA 50 101 17.

Provided with an inseparable bag for storing excess strap in use, and keep the system in this bag after use.

Compliance: Conforms to EN 795:1996 Class B.

Breaking strength: 25 kN.

Number of users:

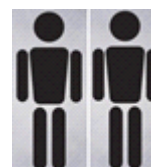

Material of components:

Webbing: Polyester, width 30 mm.

Ratchet: Steel.

HS CODE
56090090
CARTON SIZE / PIECES
60 x 40 x 24 cm / 5
AET N°3959 I1 E7
Satra Technology Centre, N°0321 Wyndham Way, Telford Way, Kettering Northamptonshire, NN16 8SD, United Kingdom
ARTICLE 11 GB07/73551
SGS United Kingdom Ltd., N°0120 Unit 202B, Worle Parkway, Weston-super-Mare, BS22 6WA, United Kingdom