



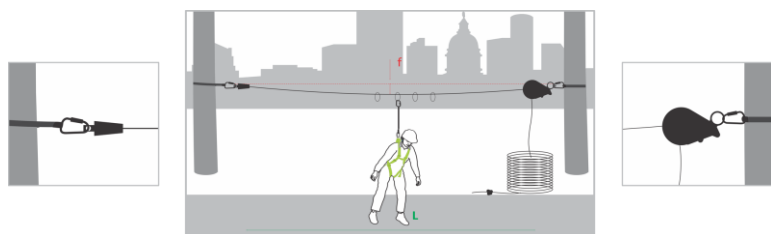


## TECHNICAL SHEET FA 60 007 01

### 4 USER HORIZONTAL TEMPORARY LIFELINE, WITH 4 O-RINGS

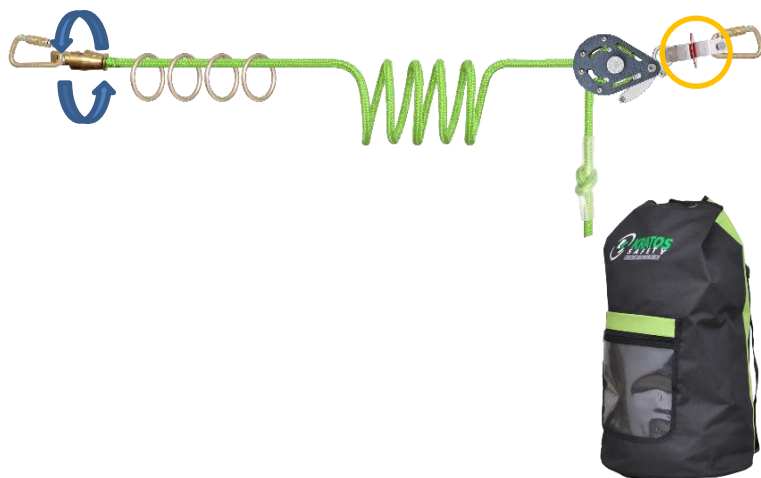


- Temporary and reusable lifeline specially designed to provide a suitable and safe anchorage to 1, 2, 3 or 4 users at the same time.
- Kernmantle rope (16 mm diam.) equipped with a specially designed tensioner for adjusting the tension of the lifeline between the 2 supports. The tensioner has a tension indicator .
- Has a brass swivel-type end specially designed to prevent any twisting of the rope during the use. Has a stop knot secured with protective sleeve at the other end, to prevent the rope from accidentally moving out of the tensioner.
- Provided with 2 steel Triple action-locking Karabiners with a 21 mm gate opening (ref. FA 50 301 23) and a transport bag FA 90 107 00.
- Has 4 Forged steel O-Rings for attaching the fall arrest system of each user.
- Easy to use, quick and reliable.



When installing the lifeline, it is essential to take into account the deflection ( $f$ ) of the lifeline that needs to be added to the clearance of the fall arrest system used.

( $f$ ) = 4,83 m (for L=25 m) for 1 user

( $f$ ) = 4,95 m (for L=25 m) for 4 users

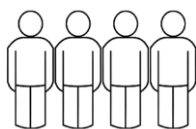

Tested for a use by 4 people.

**Length:** adjustable, can be used from 5 to 25 m.

**Compliance:** Complies with EN795:2012 Type C and TS16415:2013 Type C.

#### Material of components:

Tensioner: Aluminium and Stainless Steel.

Swivel-type end: Brass.

Karabiner and O-Rings: Steel.

Available length :		Weight :
5 to 25 m		9,27 kg

#### KRATOS SAFETY

689 Chemin du Buclay  
38540 Heyrieux – FRANCE

Tel. : +33 (0)4 72 48 78 27

Fax. : +33 (0)4 72 48 58 32

[www.kratossafety.com](http://www.kratossafety.com) / [info@kratossafety.com](mailto:info@kratossafety.com)

#### HS CODE

56090090

#### CARTON SIZE / PCS.

40 x 40 x 24 cm / 1

#### Technical report SPC0235816 Extension 1

#### Satra Technology Centre, N°0321

Wyndham Way, Telford Way, Kettering  
Northamptonshire, NN16 8SD, United Kingdom

#### ARTICLE 11 GB07/73551

#### SGS United Kingdom Ltd., N°0120

Unit 202B, Worle Parkway,  
Weston-super-Mare, BS22 6WA, United Kingdom