




## TECHNICAL SHEET FA 20 501 06B

Olympe webbing retractable fall arrester, length 6 m

# Olympe

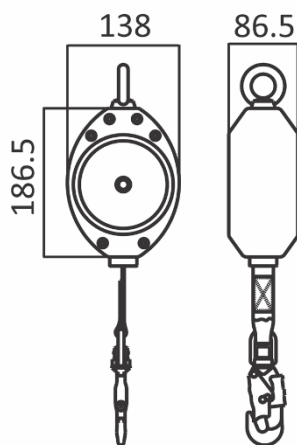

- Casing made up of high impact strength Polymer, to prevent breakage.
- Comes with a 25 mm polyester webbing.
- Internal braking mechanism to reduce the fall arrest force to less than 6 kN.
- Swivel at the top and at the bottom of the device.

**Minimum breaking strength** > 15 kN.

**Connectors:** Steel screw-locking karabiner FA 50 101 17, opening 18 mm, at anchorage end, and steel snap-hook FA 50 203 20, opening 20 mm, with load indicator at attachment end.

**Maxi weight for vertical use:** 140 kg.

**CERTIFIED FOR VERTICAL USE ONLY**

**Compliance:** Conforms to EN 360:2002.

**Material of components:**

Protective casing: PA 6 30% fiberglass

Webbing: Polyester

Connectors: Steel

Length:	<b>CE</b>	Weight:
6 m		2.56 kg

**KRATOS SAFETY**

689 Chemin du Buclay  
38540 Heyrieux - FRANCE

Tel : +33 (0)4 72 48 78 27

Fax : +33 (0)4 72 48 58 32

[www.kratossafety.com](http://www.kratossafety.com) / [info@kratossafety.com](mailto:info@kratossafety.com)

**HS CODE**

8428 90 90

**CARTON SIZE / PIECES**

80 x 40 x 24 cm / 5

**AET N°6967 Issue 2 Extension 1**

**Satra Technology Centre, N°0321**

Wyndham Way, Telford Way, Kettering  
Northamptonshire, NN16 8SD, United Kingdom

**ARTICLE 11 GB07/73551**

**SGS United Kingdom Ltd., N°0120**

Unit 202B, Worle Parkway,  
Weston-super-Mare, BS22 6WA, United Kingdom