
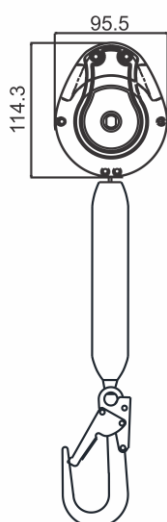


WEBBING RETRACTABLE FALL ARRESTER, LENGTH 2 M

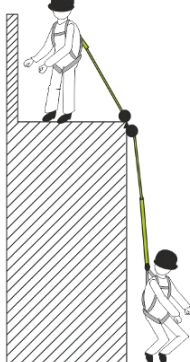

OK FALL FACTOR 2


- Casing made up of high impact strength Polymer, to prevent breakage.
- Compact and light casing.
- Comes with a 20 mm webbing.
- Has a swivel attachment eye at the upper end.
- Internal braking mechanism to reduce the fall arrest force to less than 6 kN.
- External inbuilt energy absorber protected by a removable textile sleeve.

Minimum breaking strength > 15 kN.
Connectors : 1 steel screw-locking karabiner, opening 18 mm, ref. FA 50 101 17 and 1 aluminium rebar hook, opening 60 mm, ref. FA 50 208 60.

Maxi weight for vertical use: 140 kg.

Maxi weight for horizontal use: 100 kg.

Compliance : Conforms to EN 360:2002.

Tested and approved for horizontal use (work near sharp edge) according to VG 11.060 (Rev. 08 – 10/2014), as well as for a use in Fall Factor 2.

Material of components:

Casings: PA 6

Webbing: Technora

Connectors: Steel and Aluminium

Length :	CE	Weight:
2 m		1.25 kg

KRATOS SAFETY

 689, chemin du Buclay
 38540 Heyrieux – FRANCE

Tel : +33 (0)4 72 48 78 27

Fax : +33 (0)4 72 48 58 32

www.kratossafety.com / info@kratossafety.com
HS CODE

8428 90 90

CARTON SIZE / PIECES

60 x 40 x 24 cm / 6

AET N°7626 Issue 1 Extension 2

 Satra Technology Centre, N°0321
 Wyndham Way, Telford Way, Kettering
 Northamptonshire, NN16 8SD, United Kingdom

ARTICLE 11 GB07/73551

 SGS United Kingdom Ltd., N°0120
 Unit 202B, Worle Parkway,
 Weston-super-Mare, BS22 6WA, United Kingdom