

## BASIC 01

### Description

The fall protection set BASIC 01 is safety, reliability, convenience and quality. This set has been designed to offer the perfect solution for safe work at height on: scaffolding, metal construction, building, basket crane.

The set includes:


- Safety harness JE1069A with dorsal attachment point D-ring is made of polyamide band stapled with contrasting thread, using metal buckles connect with each other. The safety harness has a regulation of the length of the thighstraps (size L-XXL). EN 361:2002
- Energy absorbing lanyard model JE3008 with energy absorber polyamide band 44mm wide and kernmantle rope a diameter 12mm, kit total length 185 cm. EN 355:2002.
- JE5017 oval screw-locking connector are made of 35CrMo steel, openig gate 18mm. EN 362:2004.
- Protetive bag.

### Packing

The originally packed set is delivered in a blister pack with instructions for use and inspection cards. 1 set/10 sets per carton/ 260 set per palet

### Shelf life

Fall protection set Basic 01 can be used for up to 10 years since date of production. Set must be withdrawn from use if they took part in fall prevention and must be permanently destroyed.

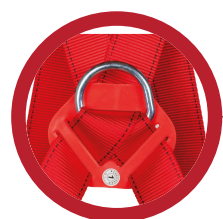

**Dorsal attachment point D-ring**



**Transverse multidirectional seams**



**45 mm high strength straps are connecting by metal buckles**



### Warning

Personal protective equipment against falls from height can be used only by the person that is trained in their use. It can't be used by a people whose health condition may affect safety (in everyday work as well as in rescue operation).