




## TECHNICAL SHEET FA 20 400 15

### WIRE ROPE RETRACTABLE FALL ARRESTER, LENGTH 15 M

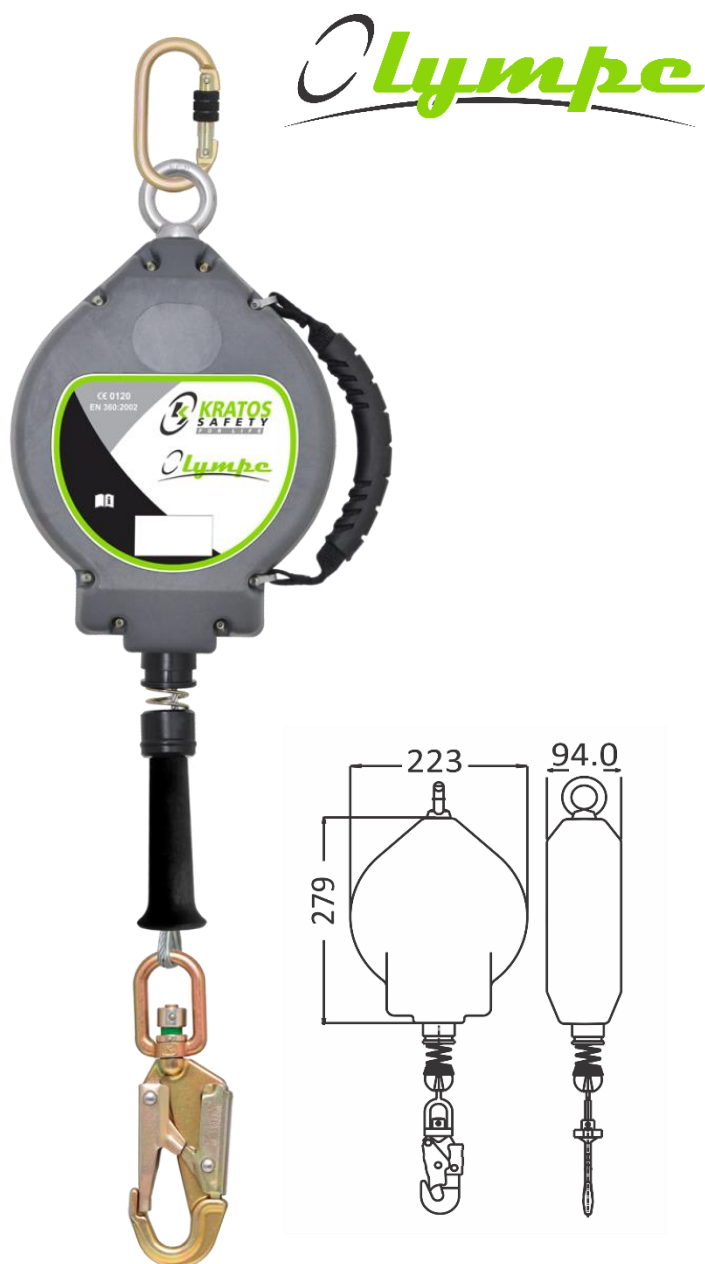

- Comes with Galvanized Steel Wire Rope of diam. 4.5 mm.
- Casing made up of high impact strength Polymer, to prevent breakage.
- Handle with special grip for a perfect comfort during carrying.
- Swivel at the top and at the bottom of the device.
- Internal braking mechanism to reduce the fall arrest force to less than 6kN.

**Minimum breaking strength > 12 kN.**

**Connectors:** Swivel and FA 50 101 17 at anchorage end, FA 50 203 20 with load indicator at attachment end.

**Average locking speed :** 1.6 m/s

**Maxi weight for horizontal use (with FA 30 304 15 only):** 100 kg.

**Maxi weight for vertical use:** 140 kg.

**Compliance:** EN 360:2002.

Tested and approved for horizontal use with the extra lanyard FA 40 304 15.

**Material of components:**

Protective casing: PA 6 30% fiberglass

Wire rope: Galvanized steel

Connectors: Steel

Length:	CE	Weight:
15 m		6.80 kg

**KRATOS SAFETY**  
689 Chemin du Buclay  
38540 HEYRIEUX – FRANCE

Tel : +33 (0)4 72 48 78 27  
Fax : +33 (0)4 72 48 58 32

[www.kratossafety.com](http://www.kratossafety.com) / [info@kratossafety.com](mailto:info@kratossafety.com)

<b>HS CODE</b>
8428 90 90
<b>CARTON SIZE / PIECES</b>
60 x 40 x 24 cm / 2
<b>AET N°4023 I4 E2</b>
Satra Technology Centre, N°0321 Wyndham Way, Telford Way, Kettering Northamptonshire, NN16 8SD, United Kingdom
<b>ARTICLE 11 GB07/73551</b>
SGS United Kingdom Ltd., N°0120 Unit 202B, Worle Parkway, Weston-super-Mare, BS22 6WA, United Kingdom