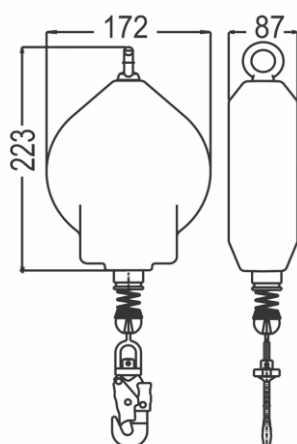


## WIRE ROPE RETRACTABLE FALL ARRESTER, LENGTH 6 M

- Casing made up of aluminium alloy.
- Comes with galvanized steel wire rope of diam. 4.5 mm with a snout for a better gripping of the retractable lanyard.
- Swivel at the top and at the bottom of the device.
- Internal braking mechanism to reduce the fall arrest force to less than 6 kN.

**Minimum breaking strength** > 12 kN.

**Connectors** : Steel screw-locking karabiner FA 50 101 17, opening 18 mm, at anchorage end, and steel snap-hook FA 50 203 20, opening 20 mm, with load indicator at attachment end.

**Average locking speed** : 1.4 m/s

**Maxi weight for horizontal use** : 100 kg.

**Maxi weight for vertical use** : 140 kg.

**Compliance** : Conforms to EN 360 : 2002.

Tested and approved for horizontal use with the lanyard FA 40 304 15.

**Material of components :**

Protective casing: Aluminium alloy

Wire rope : Galvanized steel

Connectors : Steel

|          |           |          |
|----------|-----------|----------|
| Length : | <b>CE</b> | Weight : |
| 6 m      |           | 4.40 kg  |

**KRATOS SAFETY**

689 Chemin du Buclay  
38540 Heyrieux – FRANCE

Tel : +33 (0)4 72 48 78 27

Fax : +33 (0)4 72 48 58 32

[www.kratossafety.com](http://www.kratossafety.com) / [info@kratossafety.com](mailto:info@kratossafety.com)

**HS CODE**

8428 90 90

**CARTON SIZE / PIECES**

60 x 40 x 24 cm / 4

AET N°4036 I 4 E 1

Satra Technology Centre, N°0321  
Wyndham Way, Telford Way, Kettering  
Northamptonshire, NN16 8SD, United Kingdom

**ARTICLE 11 GB07/73551**

SGS United Kingdom Ltd., N°0120  
Unit 202B, Worle Parkway,  
Weston-super-Mare, BS22 6WA, United Kingdom