



## PARTICLE & GAS REUSABLE MASK

...easy connection multiple protection




# Filter 2000-OV P3 R with an active carbon layer

ref:  
PG-2000P3R

Replaceable Particulate filter, reusable for half masks and two-way masks, with additional an active carbon layer which reduces unpleasant odours.

The 2000-OV P3 R filter is replaceable, reusable, attached bayonet connection. Can be used more than one working shift. It is recommended not to use more than three working shifts.

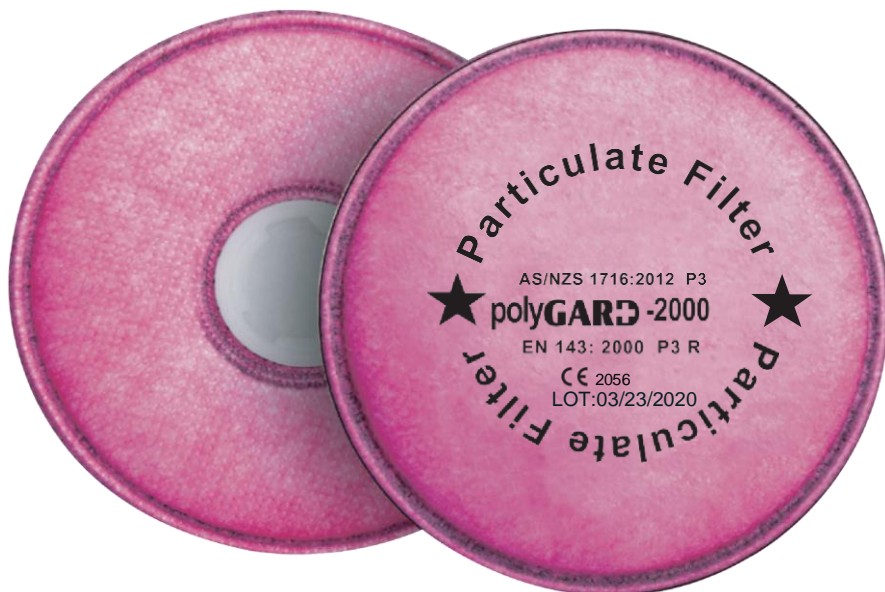

The filter, when attached with a suitable two-filter facepiece (half mask, mask), protects the respiratory system from non-toxic and medium-toxic solid aerosols or water-based aerosols (dust, smoke, fog), if concentration of the dispersed phase of the aerosol does not exceed the values of 50 x OEL (Occupational Exposure Limits) when attached with a half mask and 1000 x OEL when attached with a full face mask.

Filters 2000 series have a bayonet connection for use with half masks and two-way masks 7500 and S600 series.

**Packing:**  
1 pair in hermetic foil bag  
50 pairs in 1 carton box  
Carton with dimensions of 425x255x245mm  
Weight of a carton box 1kg

**Storage:**  
Store in original packing without air-purifying components, with instructions.  
At temperatures from -20°C to +30°C . Humidity RH<80%, Away from sunlight.

**Shelf life:**  
Filters properly stored and originally packaged have an expiry date of 5 years from production dates. The production date is on the filter and on the packaging.

**Certification:**  
In compliance with EN 143:2000+A1:2008

AS/NZS 1716:2012

**CE 2056**

Notifying body: 2056  
SAI Global Assurance Services Ltd.  
Partis house, Ground Floor, Davy Avenue, Knowhill  
Milton Keynes, MK5 8 HJ, United Kingdom

### Use Limitations:

Do not use in environment in which the oxygen content is lower than 19.5% by volume or in and in the presence of unknown gases.

### Materials:

Connector: polypropylene  
Non-woven filter fabric  
Weight 1pc: 10g

